WARMLYYOURS
RADIANT HEATING

Circuit Check Installation

1. LAY OUT THE WARMLYYOURS WARMING SYSTEM ROLL(S)

Lay out the roll(s) in accordance with the design layout and instructions provided by WarmlyYours.

2. TEST THE CIRCUIT CHECK[1]

Before connecting any wires, install the batteries in the device and turn it “on” and “off” to test the alarm.

After confirming that the alarm is in good working order, connect the wires as follows:

- Connect Black inner conductor core wire to the Black terminal.
- Connect 2nd inner conductor core wire to the Red terminal.

Turn on the Circuit Check and touch the ground sheath to one of the inner conductor wires. This should activate the alarm. If the Circuit Check does not pass all these tests, please call WarmlyYours Customer Service at (800) 875-5285.

- Connect ground sheath to the Green terminal.

3. ACTIVATE THE CIRCUIT CHECK AND PROCEED TO INSTALL FLOORING

4. IF THE CIRCUIT CHECK ALARM SOUNDS, STOP!

The alarm sounding indicates a short in the circuit or break in the system. Check the trouble shooting guide in the WarmlyYours installation manual or call **24/7 Installation Support at (800) 875-5285**.

WarmlyYours can ship a splice kit to repair the short. Alternatively, the wire may be repaired by an electrician. Please see the wire repair document on www.warmlyyours.com, or call us 24/7 at (800) 875-5285.·

Note[1]: This device is NOT an Ohm meter. WarmlyYours requires that the roll be tested before, during and after installation with a Digital Ohm meter.

Please turn over to view detailed illustrations for wiring Tempzone to the Circuit Check

10061
Rev 8/11

WARMLYYOURS
RADIANT HEATING

Circuit Check Installation

Wiring Tempzone to Circuit Check

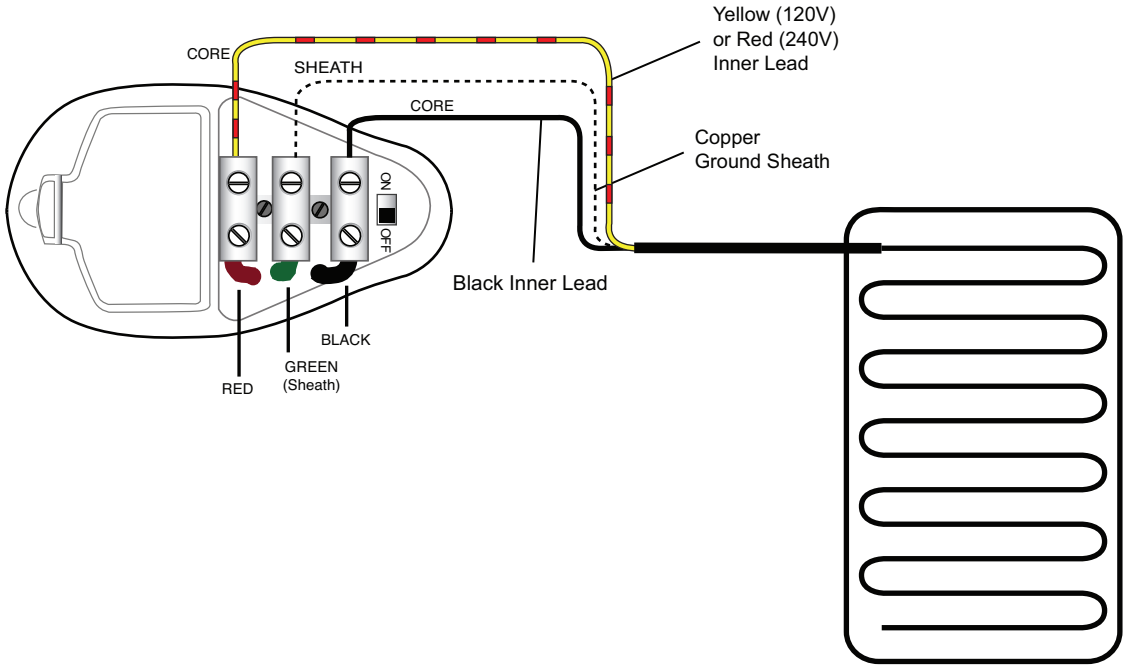

Wire Construction

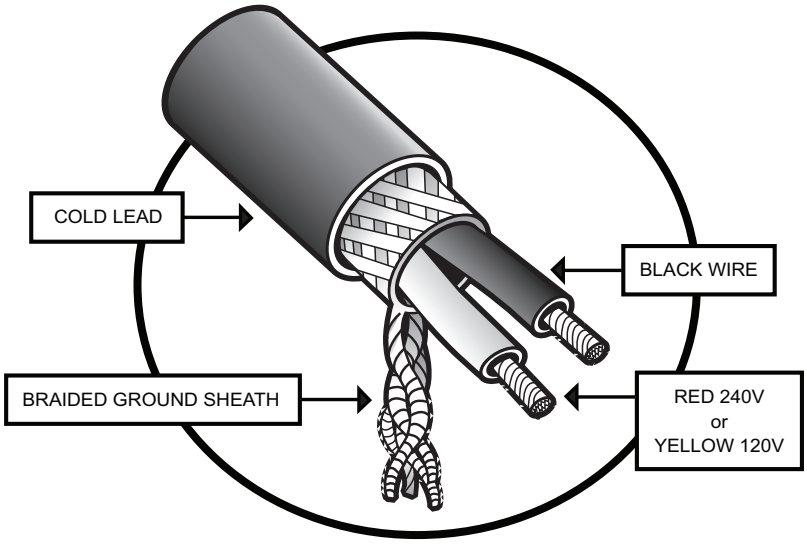

Free Design Service • 24/7 Installation Support • No Nonsense™ Warranty • (800) 875-5285 • www.WarmlyYours.com